MITSUBISHI

Digital-Analog Converter Module

User's Manual

(Hardware)

AJ65SBT-62DA

Thank you for buying the Mitsubishi general-purpose programmable controller MELSEC Series

Prior to use, please read both this manual and detailed manual thoroughly and familiarize yourself with the product.

MODEL	AJ65S-62DA-U-H-JE
MODEL CODE	13JT10
IB(NA)-0800139-E(0810)MEE	

©2000 MITSUBISHI ELECTRIC CORPORATION

● SAFETY PRECAUTIONS ●

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.
These precautions apply only to this equipment.
Refer to the user's manual of the CPU module to use for a description of the programmable controller system safety precautions.
In this manual, the safety precautions are classified into two levels: "DANGER" and "CAUTION".

⚠DANGER	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
⚠CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.
Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

⚠DANGER

- Configure safety circuits external to the programmable controller to ensure that the entire system operates safely even when a fault occurs in the external power supply or the programmable controller.
  Failure to do so may result in an accident due to an incorrect output or malfunction.
  (1) The status of analog output depends on the setting of various functions that control the analog output. Exercise great caution when setting those functions.
  For details of analog output status, refer to Section 3.4.1 "Combinations of various functions" in the user's manual for the module.
  (2) Due to failure of the output element or internal circuit, normal output may not be obtained correctly.
  Configure an external circuit for monitoring output signals that could cause a serious accident.
- Do not install the control lines or communication cables together with the main circuit lines or power cables.
  Keep a distance of 100mm (3.94 inches) or more between them.
  Failure to do so may result in malfunction due to noise.

[Design Precautions]

⚠CAUTION

- When a module is powered ON/OFF, voltage or current may instantaneously be output from the output terminal of this module.
  In such case, wait until the analog output becomes stable. Then, start controlling the external device.

[Installation Precautions]

⚠CAUTION

- Use the programmable controller in an environment that meets the general specifications in this manual. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- For protection of the switches, do not remove the cushioning material before installation.
- Securely fix the module with a DIN rail or mounting screws.
  Tighten the screws within the specified torque range.
  Undertightening can cause drop of the screw, short circuit or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Do not directly touch any conductive part of the module.
  Doing so can cause malfunction or failure of the module.

[Wiring Precautions]

⚠CAUTION

- Shut off the external power supply for the system in all phases before wiring. Failure to do so may result in damage to the product.
- Ground the FG terminals to the protective ground conductor dedicated to the programmable controller. Failure to do so may result in malfunction.
- Tighten any unused terminal screws within the specified torque range (42 to 50N•cm).
  Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them within the specified torque range.
  If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Check the rated voltage and terminal layout before wiring to the module, and connect the cables correctly.
  Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.

[Wiring Precautions]

⚠CAUTION

- Tighten the terminal screw within the specified torque range.
  Undertightening can cause short circuit or malfunction.
  Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module.
  Such foreign matter can cause a fire, failure, or malfunction.
- Place the cables in a duct or clamp them.
  If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.
- Do not install the control lines or communication cables together with the main circuit lines or power cables.
  Failure to do so may result in malfunction due to noise.
- When disconnecting the cable from the module, do not pull the cable by the cable part. Loosen the screws of connector before disconnecting the cable.
  Failure to do so may result in damage to the module or cable or malfunction due to poor contact.

[Startup and Maintenance Precautions]

⚠CAUTION

- Do not touch any terminal while power is on.
  Doing so may cause malfunction.
- Shut off the external power supply for the system in all phases before cleaning the module or retightening the terminal screws.
  Failure to do so may cause the module to fail or malfunction.
  Undertightening the terminal screws can cause short circuit or malfunction.
  Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Do not disassemble or modify the modules.
  Doing so may cause failure, malfunction, injury, or a fire.
- Do not drop or apply strong shock to the module.
  Doing so may damage the module.
- Shut off the external power supply for the system in all phases before mounting or removing the module to or from the panel.
  Failure to do so may cause the module to fail or malfunction.
- After the first use of the product, do not mount/remove the terminal block to/from the module more than 50 times (IEC 61131-2 compliant).
- Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.
  Failure to do so may cause the module to fail or malfunction.

[Disposal Precautions]

⚠CAUTION

- When disposing of this product, treat it as industrial waste.

Revisions

* The manual number is noted at the lower right of the top cover.

Print Date	*Manual Number	Revision
Sep., 2000	IB(NA)-0800139-A	First printing
Mar., 2005	IB(NA)-0800139-B	Addition Section 2.3 Correction SAFETY PRECAUTIONS, Conformation to the EMC Directive and Low Voltage Instruction, Chapter 1, Section 2.1, 2.2, 5.2, 6.1, Chapter 7
Mar., 2006	IB(NA)-0800139-C	Correction Revisions, Conformationto the EMC Directive and Low Voltage Instruction, Section 2.3
Sep., 2006	IB(NA)-0800139-D	Correction SAFETY PRECAUTIONS, Chapter 3, Chapter 7
Oct., 2008	IB(NA)-0800139-E	Correction SAFETY PRECAUTIONS, Compliance with the EMC and Low Voltage Directives, Section 2.1, 2.2, 4,1, 6.2 Delection Section5.1

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2000 MITSUBISHI ELECTRIC CORPORATION

CONTENTS

1. Overview ····· 1
2. Specification ····· 1
2.1 General specifications ····· 1
2.2 Performance specifications ····· 2
2.3 Checking hardware versions ····· 3
3. Name of Each Part ····· 4
4. Loading and Installation ····· 6
4.1 Precautions when handling ····· 6
4.2 Installation environment ····· 6
5. Data Link Cable Wiring ····· 7
5.1 Connection of the CC-Link dedicated cables ····· 7
6. Wiring ····· 7
6.1 Wiring precautions ····· 7
6.2 Module connection example ····· 8
7. External Dimensions ····· 9

About Manual

The following manuals are also related to this product.
In necessary, order them by quoting the details in the tables below.

Related Manual

Manual name	Manual No. (Model code)
Digital-Analog Converter Module Type AJ65SBT-62DA User's Manual	SH-080107 (13JR19)

Compliance with the EMC and Low Voltage Directives

(1) For programmable controller system
To configure a system meeting the requirements of the EMC and Low Voltage Directives when incorporating the Mitsubishi programmable controller (EMC and Low Voltage Directives compliant) into other machinery or equipment, refer to the "EMC AND LOW VOLTAGE DIRECTIVES" chapter of the User's Manual for the CPU module used.
The CE mark, indicating compliance with the EMC and Low Voltage Directives, is printed on the rating plate of the programmable controller.

(2) For the product
For the compliance of this product with the EMC and Low Voltage Directives, refer to the "CC-Link module" section in the "EMC AND LOW VOLTAGE DIRECTIVES" chapter of the User's Manual for the CPU module used.

1. Overview

This user's manual explains the specifications, names and setting of parts, wiring and others of Type AJ65SBT-62DA digital-analog converter module (hereafter abbreviated to the “AJ65SBT-62DA”) which is used as a remote device station of a CC-Link system.

2. Specification

2.1 General specifications

The general specifications of the AJ65SBT-62DA are shown below.

<table>
<tr><th>Item</th><th colspan="5">Specification</th></tr>
<tr><td>Usage ambient temperature</td><td colspan="5">0 to 55°C</td></tr>
<tr><td>Storage ambient temperature</td><td colspan="5">-20 to 75°C</td></tr>
<tr><td>Usage ambient humidity</td><td colspan="5">10 to 90%RH, no condensation</td></tr>
<tr><td>Storage ambient humidity</td><td colspan="5">10 to 90%RH, no condensation</td></tr>
<tr><td rowspan="8">Vibration durability</td><td rowspan="8">Conforming to JIS B 3502, IEC 61131-2</td><td colspan="4">When there is intermittent vibration</td></tr>
<tr><td>Frequency</td><td>Acceleration</td><td>Amplitude</td><td>Sweep count</td></tr>
<tr><td>10 to 57Hz</td><td>—</td><td>0.075mm (0.0030inch)</td><td rowspan="2">10 times in each direction X, Y, Z</td></tr>
<tr><td>57 to 150Hz</td><td>9.8m/s^2</td><td>—</td></tr>
<tr><td colspan="4">When there is continuous vibration</td></tr>
<tr><td>Frequency</td><td>Acceleration</td><td>Amplitude</td><td>Sweep count</td></tr>
<tr><td>10 to 57Hz</td><td>—</td><td>0.035mm (0.0013inch)</td><td rowspan="2">—</td></tr>
<tr><td>57 to 150Hz</td><td>4.9m/s^2</td><td>—</td></tr>
<tr><td>Shock durability</td><td colspan="5">Conforming to JIS B 3502, IEC 61131-2 (147m/s^2, 3 times each in 3 directions)</td></tr>
<tr><td>Usage environment</td><td colspan="5">No corrosive gas</td></tr>
<tr><td>Usage height *3</td><td colspan="5">Less than 2000 m (less than 6562 ft.)</td></tr>
<tr><td>Installation area</td><td colspan="5">Within the control board</td></tr>
<tr><td>Over-voltage category *1</td><td colspan="5">Less than II</td></tr>
<tr><td>Pollution level *2</td><td colspan="5">Less than 2</td></tr>
</table>

*1 Indicates the location where the device is connected from the public cable network to the device structure wiring area.
Category II applies to the devices to which the power is supplied from a fixed equipment. Surge withstand voltage for devices with up to 300V of rated voltage is 2500V.

*2 This is an index which indicates the degree of conductive object generation in the environment Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensation must be expected occasionally.

*3 Do not use or store the programmable controller under pressure higher than the atmospheric pressure of altitude 0m.
Doing so may cause a malfunction. When using the programmable controller under pressure, please contact your sales representative.

2.2 Performance specifications

The performance specifications of the AJ65SBT-62DA are shown below.

<table>
<tr><td colspan="2">Item</td><td>AJ65SBT-62DA</td></tr>
<tr><td rowspan="2">Digital input</td><td>Voltage</td><td>16-bit signed binary (-4096 to +4095)</td></tr>
<tr><td>Current</td><td>16-bit signed binary (0 to 4095)</td></tr>
<tr><td rowspan="2">Analog output</td><td>Voltage</td><td>-10 to +10V DC (external load resistance: 2kΩ to 1MΩ)</td></tr>
<tr><td>Current</td><td>0 to 20mA DC (external load resistance: 0 to 600Ω)</td></tr>
<tr><td colspan="2">I/O characteristics, maximum resolution, accuracy (accuracy relative to maximum value of analog output value)</td><td>
<table>
<tr><th rowspan="2"></th><th rowspan="2">Digital input value</th><th rowspan="2">Analog output range</th><th colspan="2">Accuracy</th><th rowspan="2">Max. resolution</th></tr>
<tr><th>Ambient temperature 0 to 55°C</th><th>Ambient temperature 25±5°C</th></tr>
<tr><td rowspan="4">Voltage</td><td rowspan="2">-4000 to +4000</td><td>-10 to +10V</td><td rowspan="2">±0.4% (±40mV)</td><td rowspan="2">±0.2% (±20mV)</td><td rowspan="2">2.5mV</td></tr>
<tr><td>User range setting 1 (-10 to +10V)</td></tr>
<tr><td rowspan="3">0 to 4000</td><td>0 to 5V</td><td rowspan="3">±0.4% (±20mV)</td><td rowspan="3">±0.2% (±10mV)</td><td>1.25mV</td></tr>
<tr><td>1 to 5V</td><td rowspan="2">1.0mV</td></tr>
<tr><td>User range setting 2 (0 to 5V)</td></tr>
<tr><td rowspan="3">Current</td><td rowspan="3">0 to 4000</td><td>0 to 20mA</td><td rowspan="3">±0.4% (±80μA)</td><td rowspan="3">±0.2% (±40μA)</td><td>5μA</td></tr>
<tr><td>4 to 20mA</td><td rowspan="2">4μA</td></tr>
<tr><td>User range setting 3 (0 to 20mA)</td></tr>
</table>
Factory setting is -10 to +10V.
</td></tr>
<tr><td colspan="2">Maximum conversion speed</td><td>1ms/1 channel</td></tr>
<tr><td colspan="2">Output short-circuit protection</td><td>Yes</td></tr>
<tr><td colspan="2">Absolute maximum output</td><td>Voltage: ±12V, Current: +21mA</td></tr>
<tr><td colspan="2">Number of analog output points</td><td>2 channels/1 module</td></tr>
<tr><td colspan="2">CC-Link station type</td><td>Remote device station</td></tr>
<tr><td colspan="2">Number of occupied stations</td><td>1 station (RX/RY: 32 points each, RWr/RWw: 4 points each)</td></tr>
<tr><td colspan="2">Communication cable</td><td>CC-Link dedicated cable</td></tr>
<tr><td colspan="2">Dielectric withstand voltage</td><td>500V AC for 1 minute across all power supply and communication system terminals and all analog output terminals</td></tr>
<tr><td colspan="2">Isolation system</td><td>Across communication system terminals and all analog output terminals: Photocoupler isolated
Across power supply system terminals and all analog output terminals: Photocoupler isolated
Across channels: Non-isolated</td></tr>
<tr><td colspan="2">Noise immunity</td><td>By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency</td></tr>
<tr><td rowspan="2">External connection</td><td>Communication area, module power supply</td><td>7-point 2-piece terminal block
[transmission circuit, module power supply, FG]
M3 × 5.2 Tightening torque: 59 to 88N·cm
Applicable solderless terminals: 2 max.</td></tr>
<tr><td>I/O area</td><td>Direct-coupled, 18-point terminal block [analog output area]
M3 × 5.2 Tightening torque: 59 to 88N·cm
Applicable solderless terminals: 2 max.</td></tr>
<tr><td colspan="2">Applicable wire size</td><td>0.3 to 0.75mm^2</td></tr>
<tr><td colspan="2">Applicable solderless terminals</td><td>• RAV1.25-3 (conforming to JIS C 2805)
[Applicable wire size :0.3 to 1.25mm^2]
• V2-MS3, RAP2-3SL, TGV2-3N
[Applicable wire size: 1.25 to 2.0mm^2]</td></tr>
</table>

Item	AJ65SBT-62DA
Module mounting screw	M4 screw × 0.7mm × 16mm or more (tightening torque range: 78 to 108N•cm) Can also be mounted to DIN rail
Applicable DIN rail	TH35-7.5Fe, TH35-7.5Al (conforming to IEC 60715)
External power supply	24V DC (20.4V DC to 26.4V DC)
	Inrush current :8.2A, within 2.1ms
	Current consumption: 0.16A (at 24VDC)
Weight	0.20 kg

Point
D/A conversion values are fluctuated by self-heating within approx. 30 minutes after power is turned ON.

2.3 Checking hardware versions

The hardware versions of the AJ65SBT-62DA can be checked on the DATE section on the rating plate, which is situated on the side of the module.

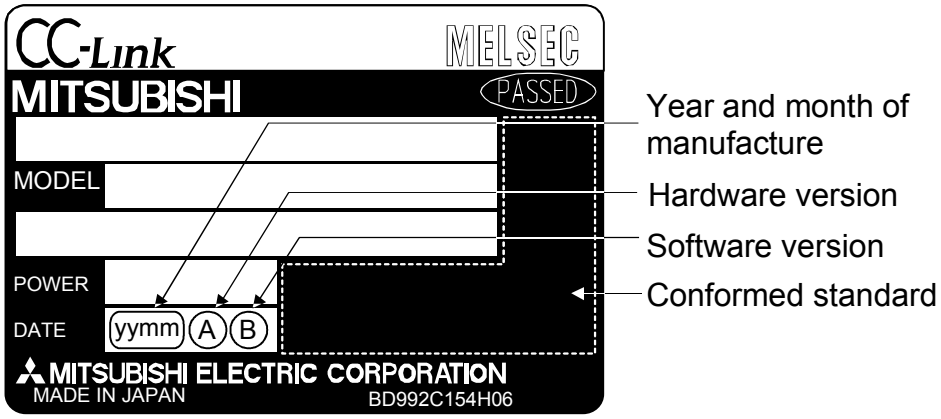

3. Name of Each Part

The name of each part in the AJ65SBT-62DA is shown.

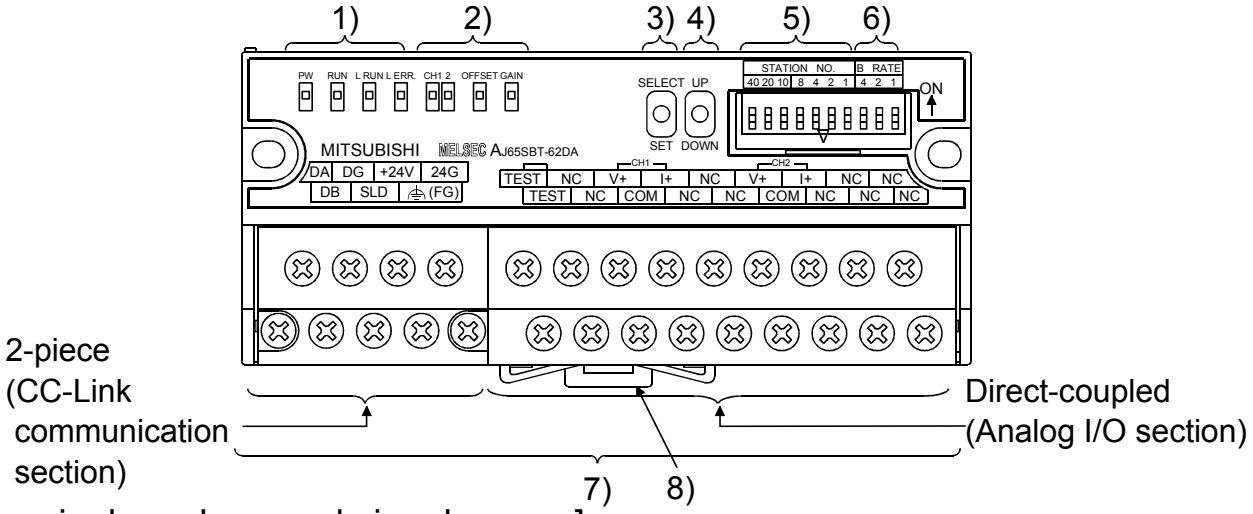

[Terminal numbers and signal names]

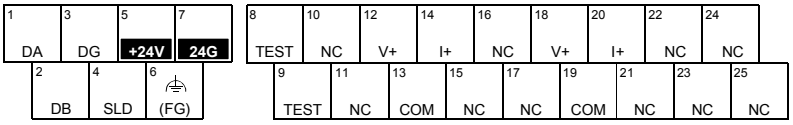

Number	Name and appearance	Description		
1)	Operation status display LED	PW LED	ON : Power supply on OFF : Power supply off	
		RUN LED	Normal mode	On : Normal operation Flashing : 0.1s intervals indicate an output range setting error. 0.5s intervals indicate a digital value setting error. Off : 24VDC power supply shutoff or watchdog timer error occurred.
			Test mode	On : Indicate that the SELECT/SET switch is in the SET position. Flashing : 0.1s intervals indicate that the output range setting is not any of "user range settings 1 to 3". 0.5s intervals indicates that you attempted to make offset/gain setting outside the setting range. Off : Indicates that the SELECT/SET switch is in the SELECT or center position.
		L RUN LED	On : Normal communication Off : Communication cutoff (time expiration error)	
		L ERR. LED	On : Indicates that transmission speed setting or station number setting is outside the range. Flicker at fixed intervals : Indicates that transmission speed setting or station number setting was changed from that at power-on. Flicker at unfixed intervals : Indicates that you forgot fitting the termination resistor or the module or CC-Link dedicated cable is affected by noise. Off : Indicates normal communications.	

<table>
<tr><th>Number</th><th>Name and appearance</th><th colspan="3">Description</th></tr>
<tr><td rowspan="2">2)</td><td rowspan="2">Offset/gain adjusting LEDs</td><td rowspan="2">CH □
OFFSET
GAIN</td><td>Normal mode</td><td>Normally OFF.</td></tr>
<tr><td>Test mode</td><td>The LEDs lit change every time the SELECT/SET switch is moved to SELECT.</td></tr>
<tr><td>3)</td><td>SELECT/SET switch</td><td colspan="3">Used to make offset/gain setting in the test mode.</td></tr>
<tr><td>4)</td><td>UP/DOWN switch</td><td colspan="3">Used to adjust the offset value and gain value of the channel specified by the SELECT/SET switch.</td></tr>
<tr><td>5)</td><td>Station number setting switches
 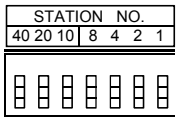
</td><td colspan="3">Use the switches in STATION NO. "10", "20" and "40" to set the tens of the station number.
Use the switches in STATION NO. "1", "2", "4" and "8" to set the units of the station number.
The switches are all factory-set to OFF.
Always set the station number within the range 1 to 64.
You cannot set the same station number to two or more stations.
Setting any other number than 1 to 64 will result in an error, flickering the "L ERR." LED.

<table>
<tr><th rowspan="2">Station number</th><th colspan="3">Tens</th><th colspan="4">Units</th></tr>
<tr><th>40</th><th>20</th><th>10</th><th>8</th><th>4</th><th>2</th><th>1</th></tr>
<tr><td>1</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td></tr>
<tr><td>2</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td></tr>
<tr><td>3</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr>
<tr><td>4</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td></tr>
<tr><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td></tr>
<tr><td>10</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr>
<tr><td>11</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td></tr>
<tr><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td><td>:</td></tr>
<tr><td>64</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td></tr>
</table>
(Example) To set the station number to "32", set the switches as indicated below.

<table>
<tr><th rowspan="2">Station number</th><th colspan="3">Tens</th><th colspan="4">Units</th></tr>
<tr><th>40</th><th>20</th><th>10</th><th>8</th><th>4</th><th>2</th><th>1</th></tr>
<tr><td>32</td><td>OFF</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td></tr>
</table></td></tr>
<tr><td>6)</td><td>Transmission speed setting switches
 
</td><td colspan="3">
<table>
<tr><th rowspan="2">Set value</th><th colspan="3">Setting switches</th><th rowspan="2">Transmission speed</th></tr>
<tr><th>4</th><th>2</th><th>1</th></tr>
<tr><td>0</td><td>OFF</td><td>OFF</td><td>OFF</td><td>156kbps</td></tr>
<tr><td>1</td><td>OFF</td><td>OFF</td><td>ON</td><td>625kbps</td></tr>
<tr><td>2</td><td>OFF</td><td>ON</td><td>OFF</td><td>2.5Mbps</td></tr>
<tr><td>3</td><td>OFF</td><td>ON</td><td>ON</td><td>5.0Mbps</td></tr>
<tr><td>4</td><td>ON</td><td>OFF</td><td>OFF</td><td>10Mbps</td></tr>
</table>
Always set the transmission speed within the above range.
The switches are all factory-set to OFF.
Making any other setting than the above will result in an error flickering, the "L ERR." LED.</td></tr>
<tr><td>7)</td><td>Terminal block</td><td colspan="3">Used to connect the module power supply, transmission and I/O signals.</td></tr>
<tr><td>8)</td><td>DIN rail hook</td><td colspan="3">Used to mount the module to the DIN rail.</td></tr>
</table>

4. Loading and Installation

4.1 Precautions when handling

The following is an explanation of handling precautions of the module.

(1) Do not drop or apply any strong impact to the module.

(2) Tighten the screws such as module installation screws with the following torque:

Screw location	Tightening torque range
Module installation screw (M4 screw)	78 to 108N•cm
Terminal block terminal screw (M3 screw)	59 to 88N•cm
Terminal block installation screw (M3 .5 screw)	68 to 98N•cm

4.2 Installation environment

Never install the A series programmable controller in the following environments:

(1) Locations where the ambient temperature is outside the range of 0 to 55°C.

(2) Locations where the ambient humidity is outside the range of 10 to 99%RH.

(3) Locations where dew condensation takes place due to sudden temperature changes.

(4) Locations where there are corrosive and/or combustible gasses.

(5) Locations where there is a high level of conductive power (such as dust and iron filings, oil mist, salt, and organic solvents).

(6) Locations exposed to the direct rays of the sun.

(7) Locations where strong power and magnetic fields are generated.

(8) Locations where vibration and shock are directly transmitted to the main module.

5. Data Link Cable Wiring

5.1 Connection of the CC-Link dedicated cables

Connect the CC-Link dedicated cable between the AJ65SBT-62DA and master module as shown below.

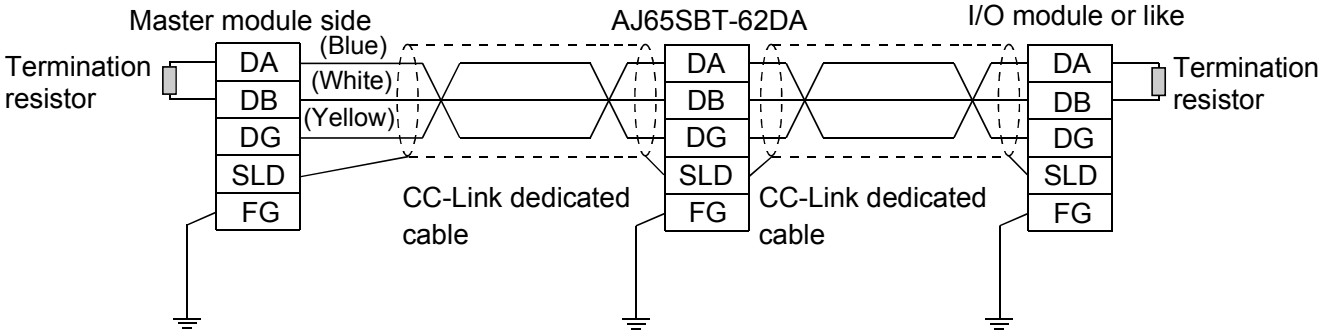

6. Wiring

6.1 Wiring precautions

To obtain maximum performance from the functions of AJ65SBT-62DA and improve the system reliability, an external wiring with high durability against noise is required.

The precautions when performing external wiring are as follows:

(1) Use separate cables for the AC and AJ65SBT-62DA external output signals, in order not to be affected by the AC side surge or conductivity.

(2) Do not bundle or place with load carrying wires other than the main circuit line, high voltage line or programmable controller. Noises, surges, or conductivity may affect the system.

(3) Place a one-point grounding on the programmable controller side for the shielded line or shielded cable.

6.2 Module connection example

(1) For voltage output

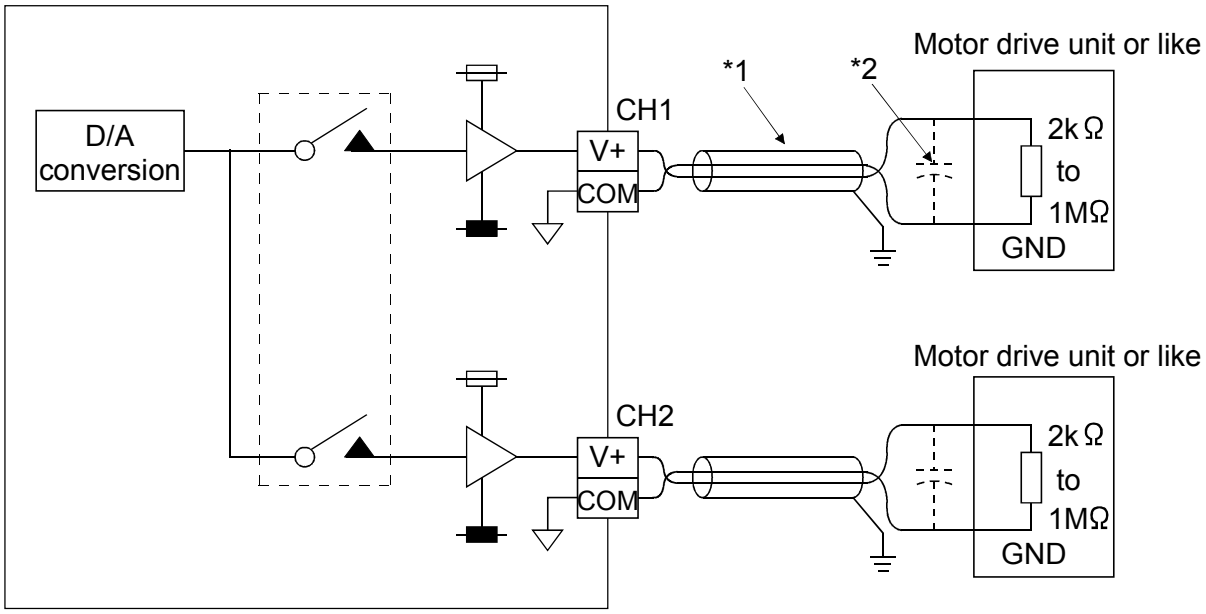

*1 Use a two-core twist shielded line for the wiring.

*2 If noise or ripples occur in the external wiring, connect a 0.1 to 0.47μF capacitor (25V or higher voltage-resistant product) to the input terminals of the external device.

(2) For current output

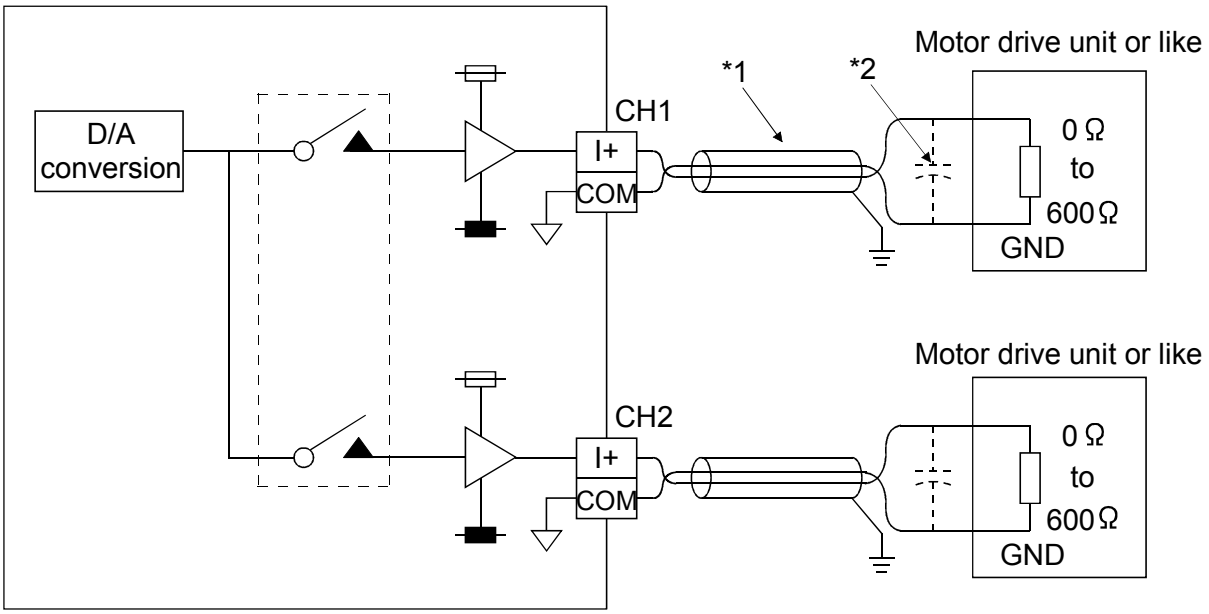

*1 Use a two-core twist shielded line for the wiring.

*2 If noise or ripples occur in the external wiring, connect a 0.1 to 0.47μF capacitor (25V or higher voltage-resistant product) to the input terminals of the external device.

7. External Dimensions

The external dimensions of the AJ65SBT-62DA is shown below.
The appearance of the AJ65SBT-62DA varies depending on the hardware version.
For checking method of the hardware version, refer to Section 2.3.

(1) Hardware version H or later

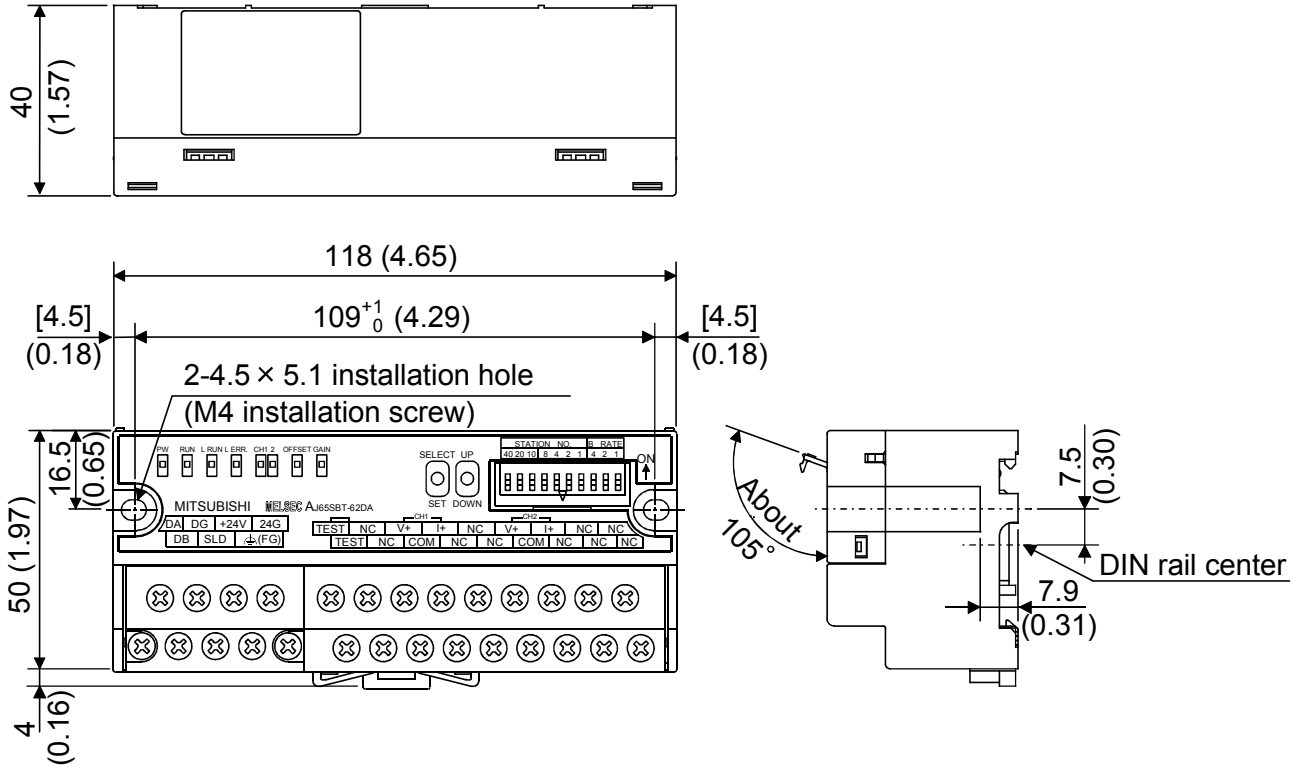

Unit:mm(inch)

(2) Hardware version G or earlier

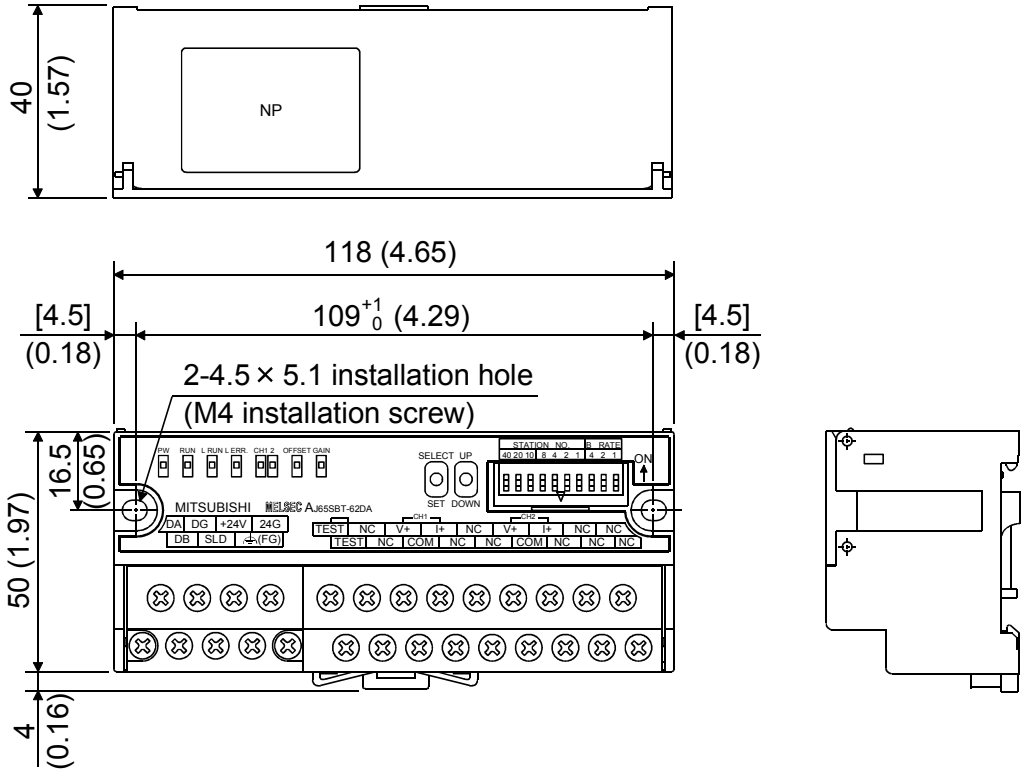

Unit:mm(inch)

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

⚠For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061, U.S.A. Tel : +1-847-478-2100
Brazil	MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Rua Correia Dias, 184, Edificio Paraiso Trade Center-8 andar Paraiso, Sao Paulo, SP Brazil Tel : +55-11-5908-8331
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire., AL10 8XB, U.K. Tel : +44-1707-276100
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo-Ingr.2 Via Paracelso 12, I-20041 Agrate Brianza., Milano, Italy Tel : +39-039-60531
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80, E-08190 Sant Cugat del Valles, Barcelona, Spain Tel : +34-93-565-3131
France	Mitsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France TEL: +33-1-5568-5568
South Africa	Circuit Breaker Industries Ltd. Private Bag 2016, ZA-1600 Isando, South Africa Tel : +27-11-928-2000

Country/Region	Sales office/Tel
Hong Kong	Mitsubishi Electric Automation (Hong Kong) Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, Hong Kong Tel : +852-2887-8870
China	Mitsubishi Electric Automation (Shanghai) Ltd. 4/F Zhi Fu Plazz, No.80 Xin Chang Road, Shanghai 200003, China Tel : +86-21-6120-0808
Taiwan	Setsuyo Enterprise Co., Ltd. 6F No.105 Wu-Kung 3rd.Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499
Korea	Mitsubishi Electric Automation Korea Co., Ltd. 1480-6, Gayang-dong, Gangseo-ku Seoul 157-200, Korea Tel : +82-2-3660-9552
Singapore	Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building, Singapore 159943 Tel : +65-6470-2460
Thailand	Mitsubishi Electric Automation (Thailand) Co., Ltd. Bang-Chan Industrial Estate No.111 Moo 4, Serithai Rd, T.Kannayao, A.Kannayao, Bangkok 10230 Thailand Tel : +66-2-517-1326
Indonesia	P.T. Autoteknindo Sumber Makmur Muara Karang Selatan, Block A/Utara No.1 Kav. No.11 Kawasan Industri Pergudangan Jakarta - Utara 14440, P.O.Box 5045 Jakarta, 11050 Indonesia Tel : +62-21-6630833
India	Messung Systems Pvt, Ltd. Electronic Sadan NO:III Unit No15, M.I.D.C Bhosari, Pune-411026, India Tel : +91-20-2712-3130
Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.

Printed in Japan on recycled paper.